 
 
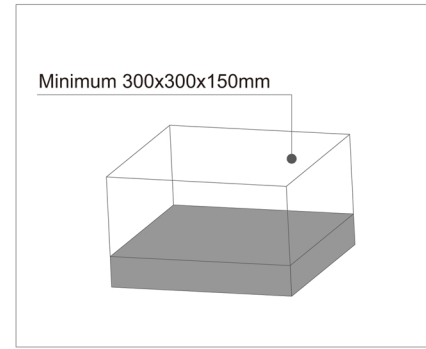 



# Installation instruction (BOLE-R 180D)

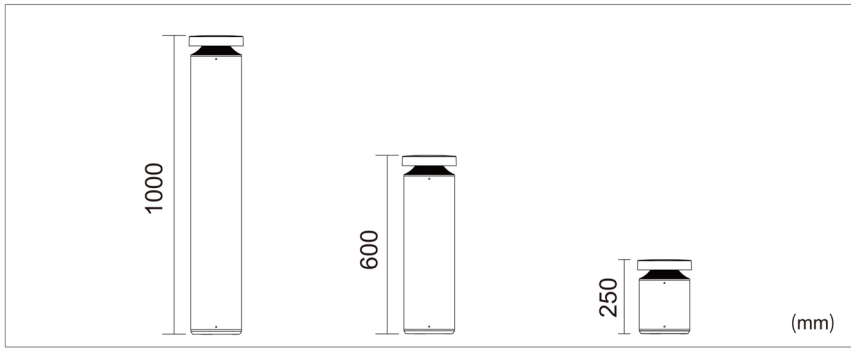


1. Dig a hole with minimum size 300x300x150mm

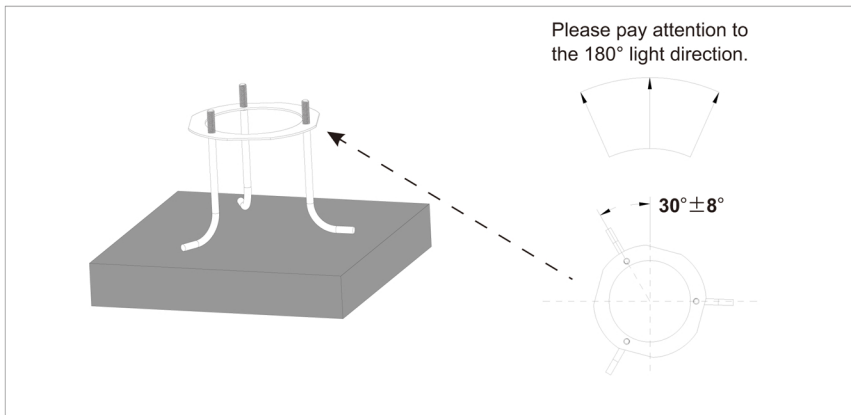

 
2. Put the L-type bracket into the hole (Please pay attention to the 180° light direction)

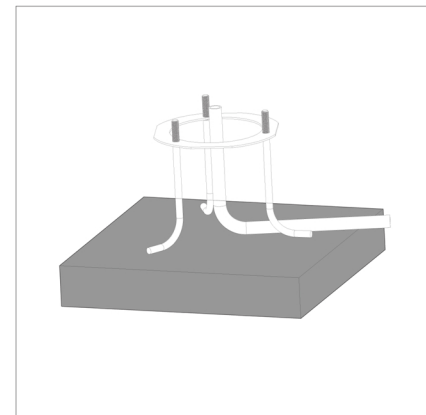

 
3. Install the conduit tube

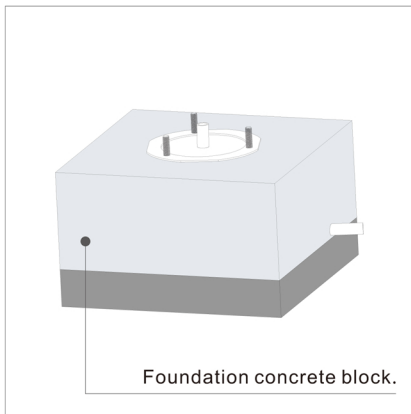

 
4. Make sure the bracket plate is flat with ground

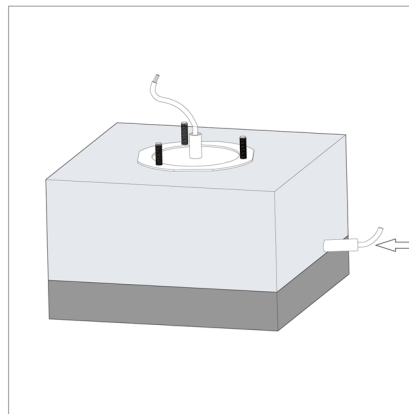

 
5. Put the wire through conduit tube

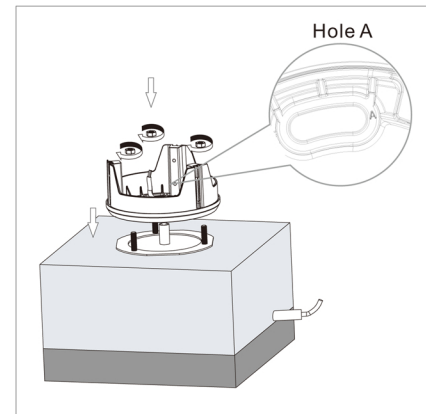

 
6. Fix the mounting plate to the L-type bracket

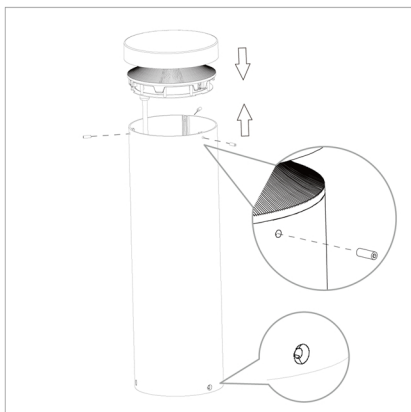

 7. Fix the bollard head and bollard tube

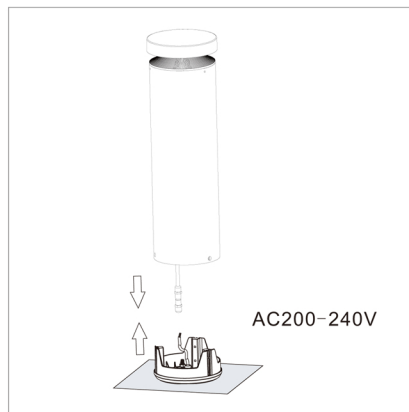


 
8. Connect the bollard wire to the electricity cable

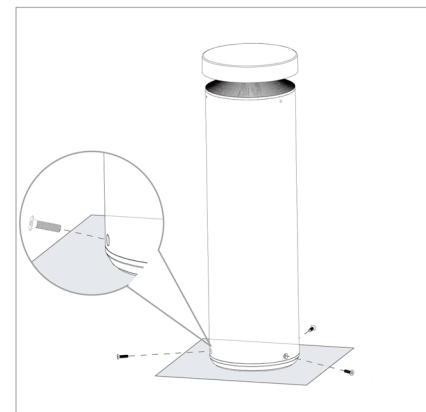


9. Fix the bollard tube onto the mounting base (Please pay attention to the 180° light direction)

Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of 25°C


# Installation instruction (BOLE-R 180D)

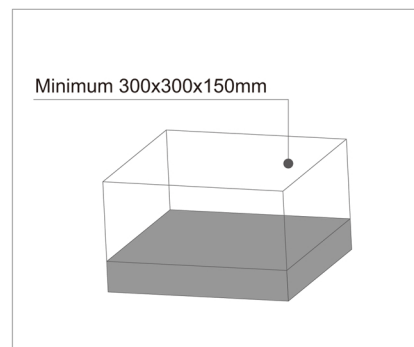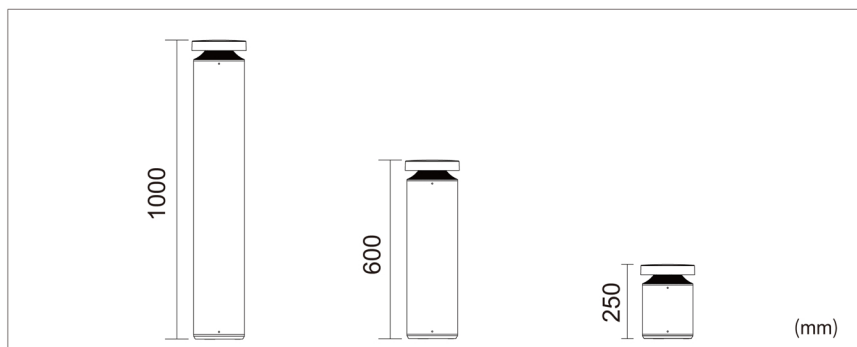  

 
1. Dig a hole with minimum size 300x300x150mm

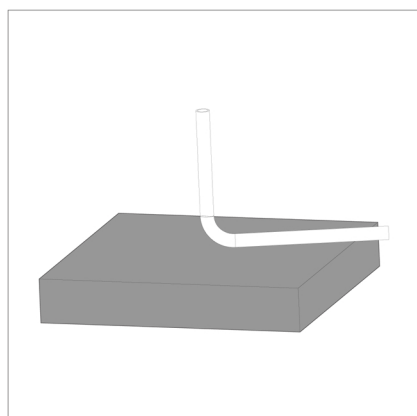

 
2. Put the conduit tube

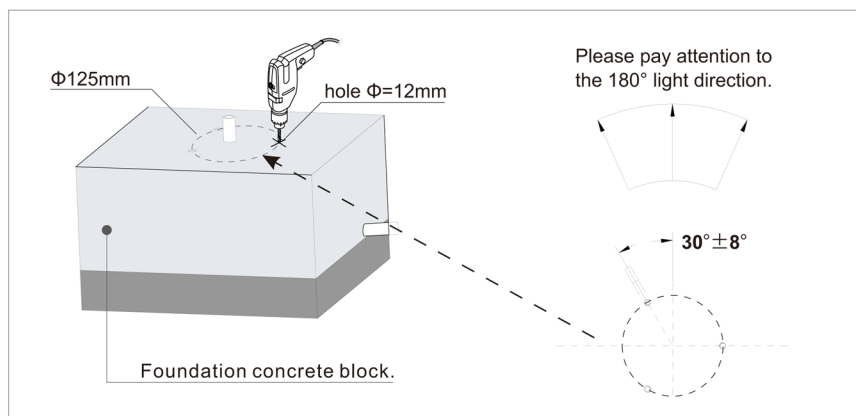

 
3. Fix the conduit tube, Ground drilling (three equal parts on a 125mm diameter circle, the hole diameter is 12mm), Please pay attention to the 180° light direction.

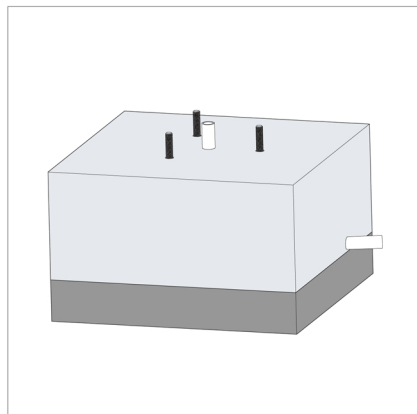

 
4. the expansion screw should be flat with ground

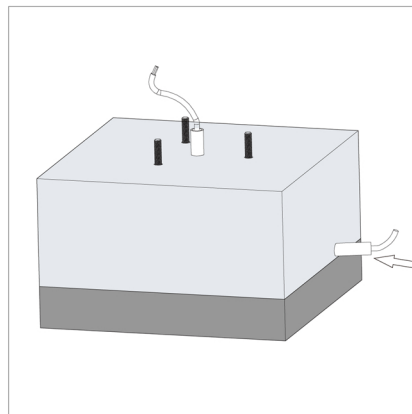

 
5. Put the wire through conduit tube

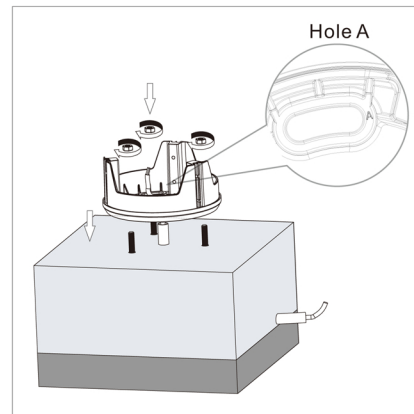

 
6. Fix the mounting plate

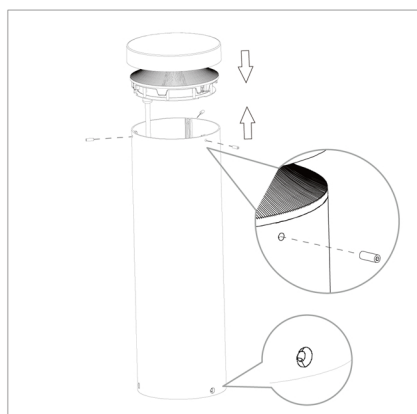

 7. Fix the bollard head and bollard tube

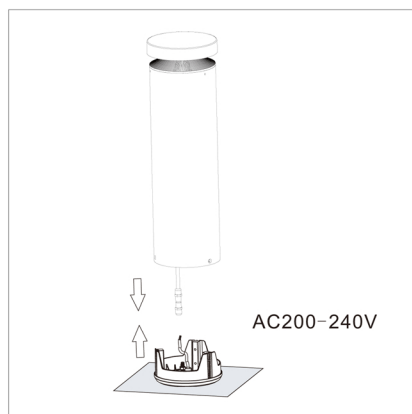

 
8. Connect the bollard wire to the electricity cable

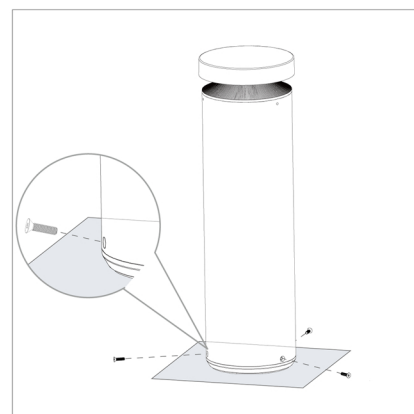

9. Fix the bollard tube onto the mounting base (Please pay attention to the 180° light direction)

 
Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of 25°C



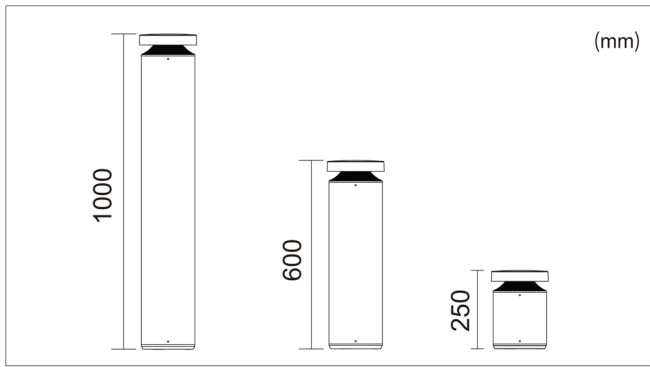


## Installation instruction

 
(BOLE-R 360D)

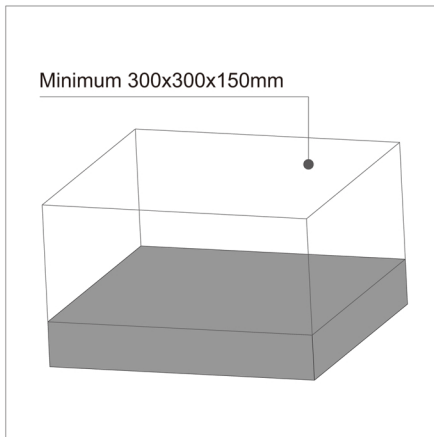

 
1. Dig a hole with minimum size 300x300x150mm

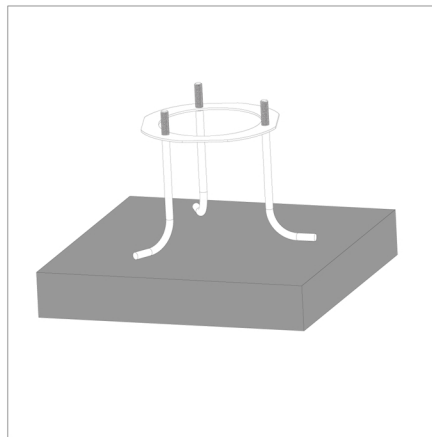

 
2. Put the L-type bracket into the hole

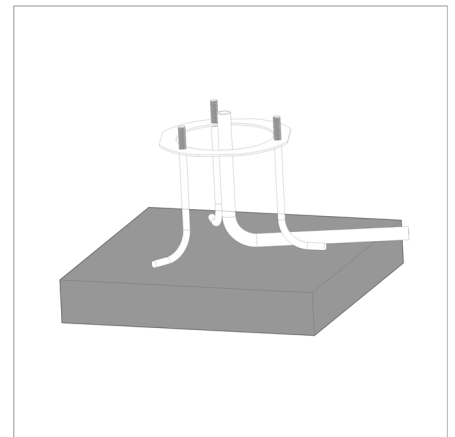

 
3. Install the conduit tube

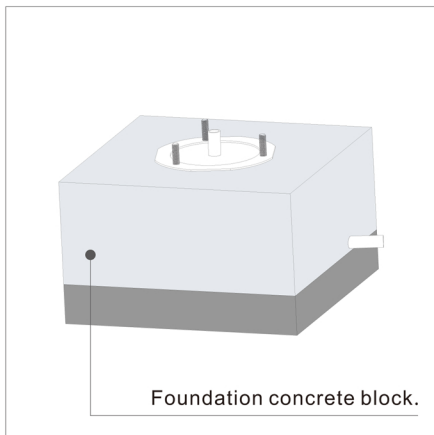

 
4. Make sure the bracket plate is flat with ground

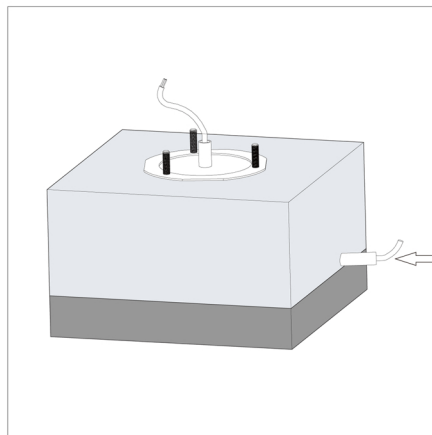

 
5. Put the wire through conduit tube

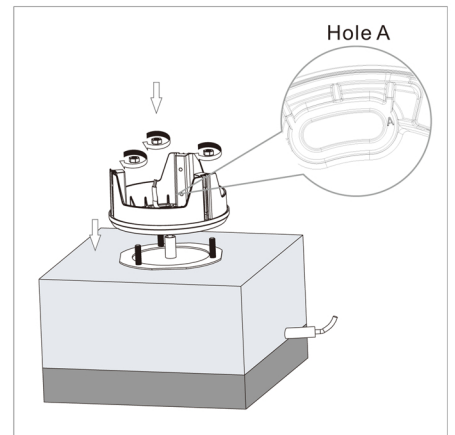

 
6. Fix the mounting plate to the L-type bracket

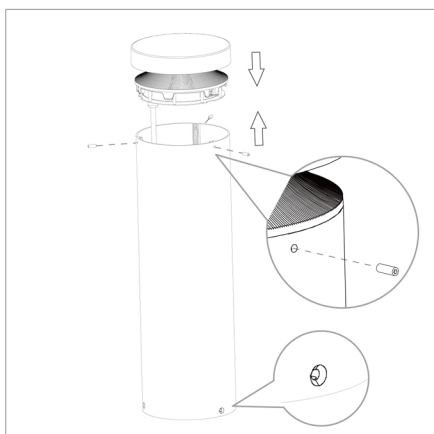

 7. Fix the bollard head and bollard tube

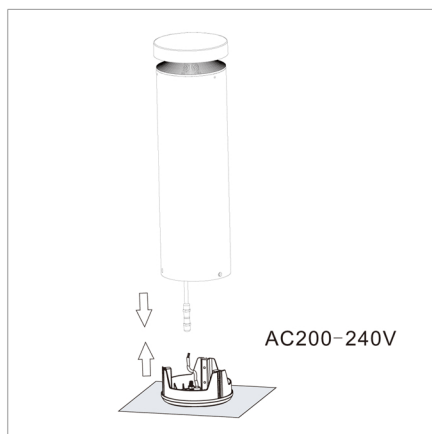


 8. Connect the bollard wire to the electricity cable

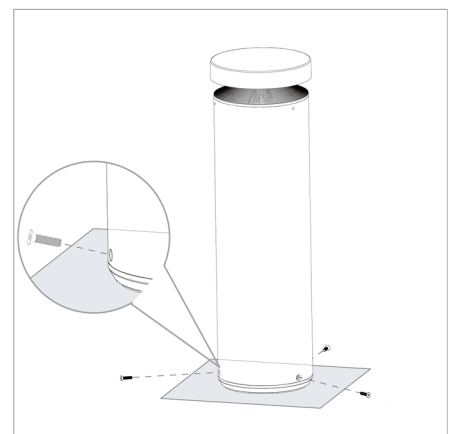


9. Fix the bollard tube onto the mounting base

 Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of  $25^{\circ}\text{C}$

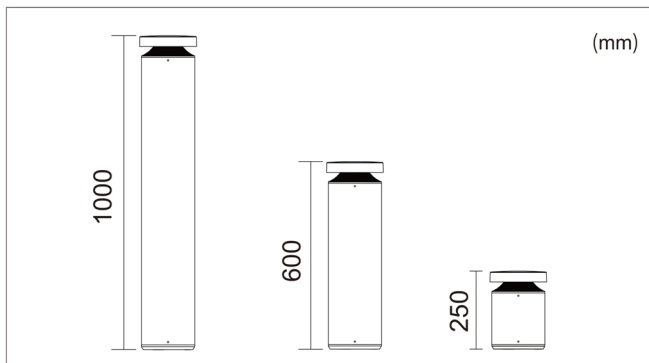


## Installation instruction

 
(BOLE-R 360D)

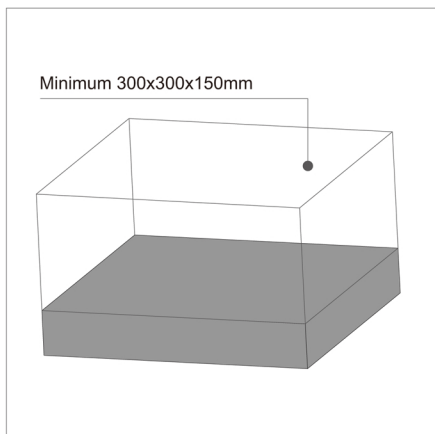

 
1. Dig a hole with minimum size 300x300x150mm

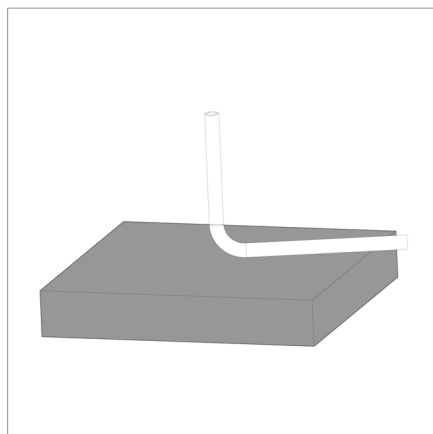

 
2. Put the conduit tube

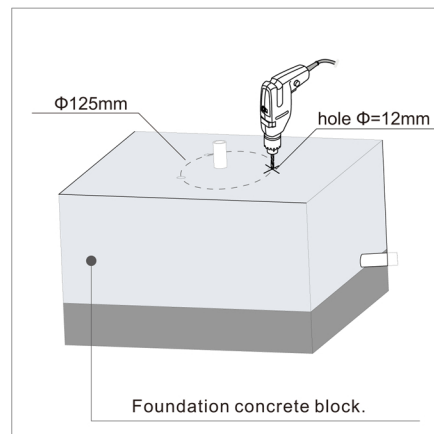

 
3. Fix the conduit tube, Ground drilling (three equal parts on a 125mm diameter circle, the hole diameter is 12mm)

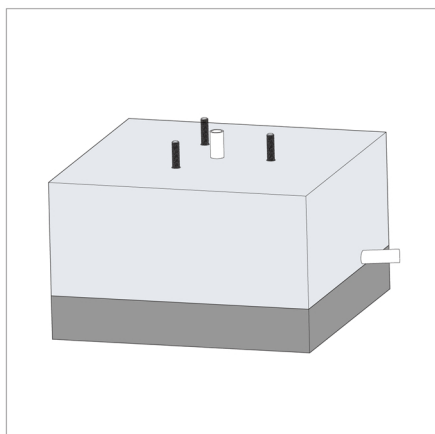

 
4. the expansion screw should be flat with ground

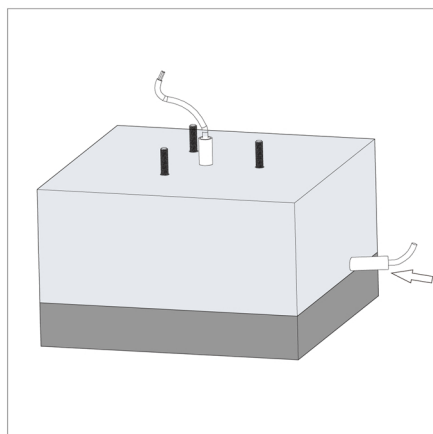

 
5. Put the wire through conduit tube

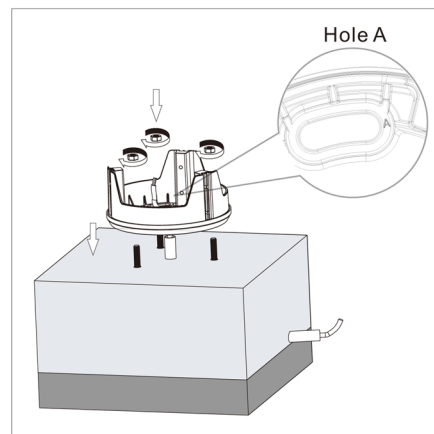

 
6. Fix the mounting plate

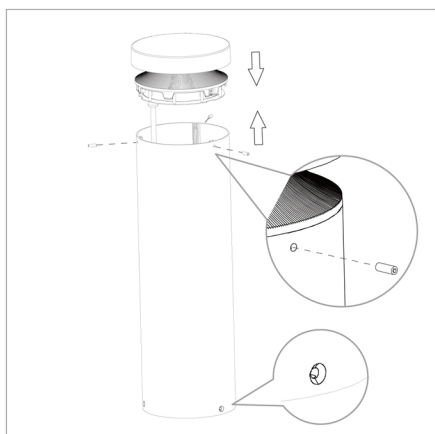

 7. Fix the bollard head and bollard tube

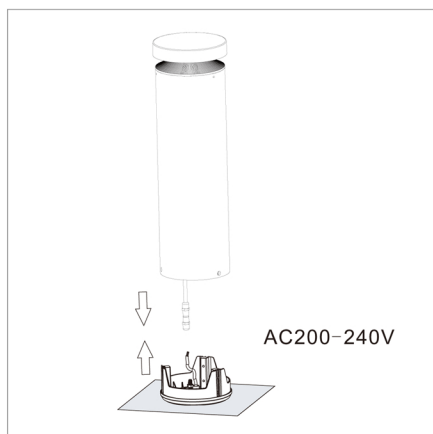


 
8. Connect the bollard wire to the electricity cable

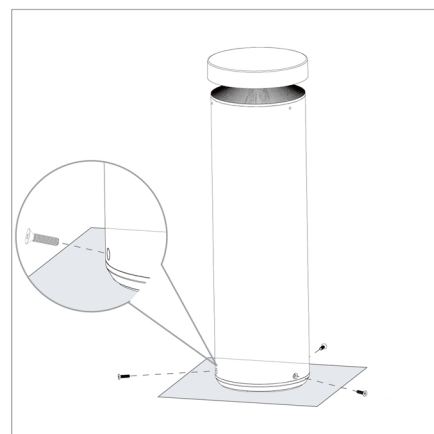


9. Fix the bollard tube onto the mounting base

Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of  $25^{\circ}\text{C}$


# Installation instruction (BOLE-R Bluetooth)

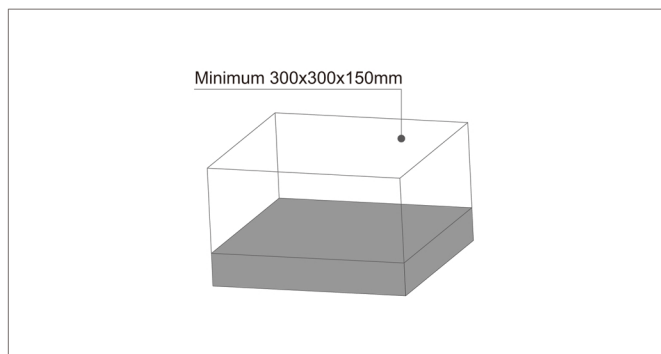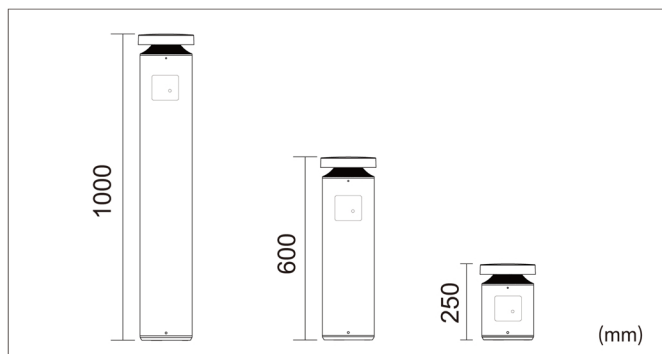  

 
1. Dig a hole with minimum size 300x300x150mm

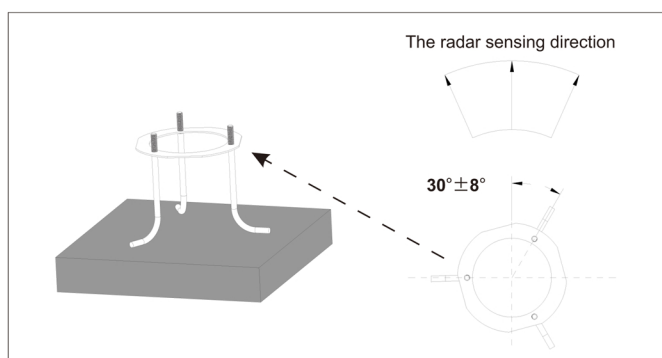

 
2. Put the L-type bracket into the hole  
(Pay attention to the radar sensing direction)

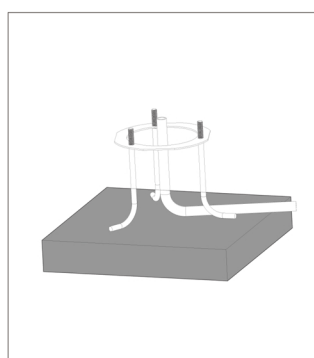

 
3. Install the conduit tube

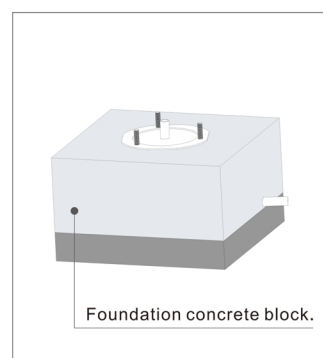

 
4. Make sure the bracket plate is flat with ground .

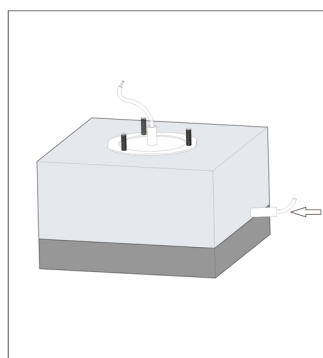

 
5. Put the wire through conduit tube

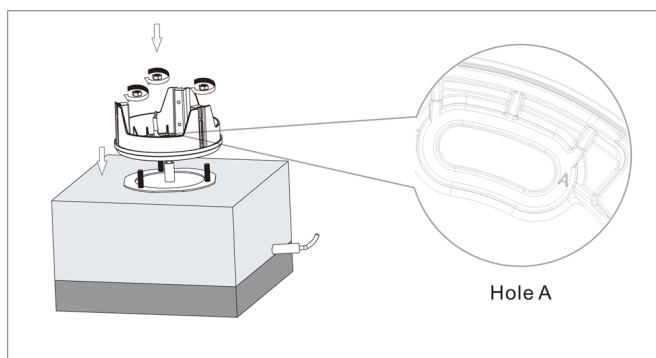

 
6. Fix the mounting plate to the L-type bracket

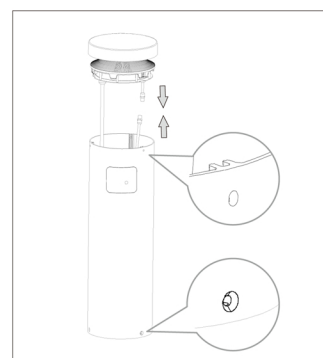

 
7. Connect the wires

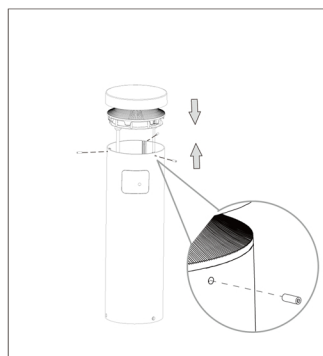

 8. Fix the bollard head and bollard tube

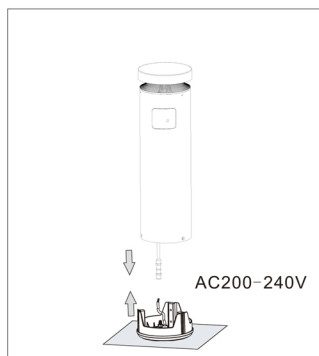

 9. Connect the bollard wire to the electricity cable



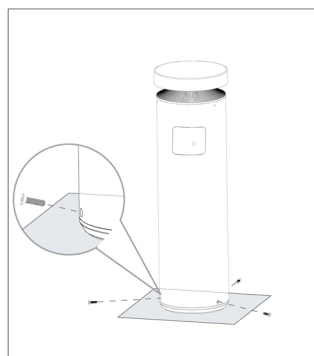


10. Fix the bollard tube onto the mounting base, Pay attention to the radar sensing direction.




Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of 25°C

# Installation instruction (BOLE-R Bluetooth)

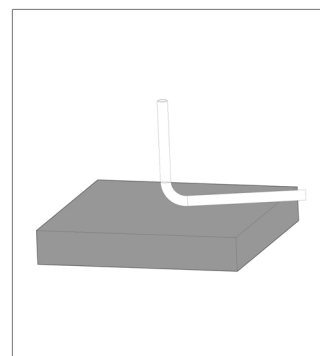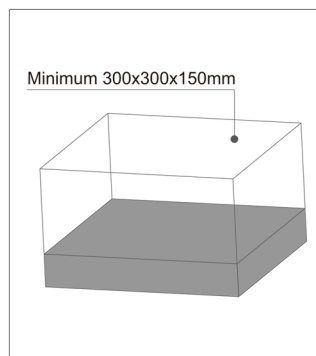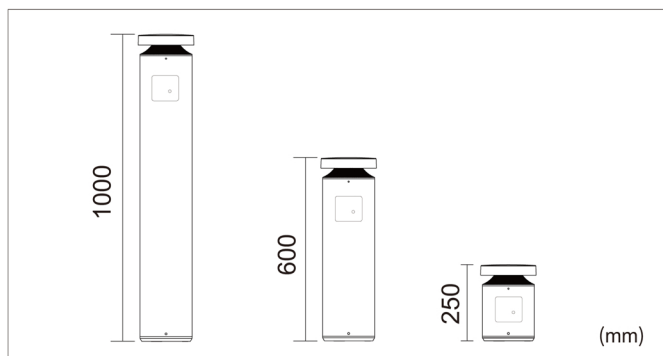   


1. Dig a hole with minimum size 300x300x150mm

 
2. Put the conduit tube

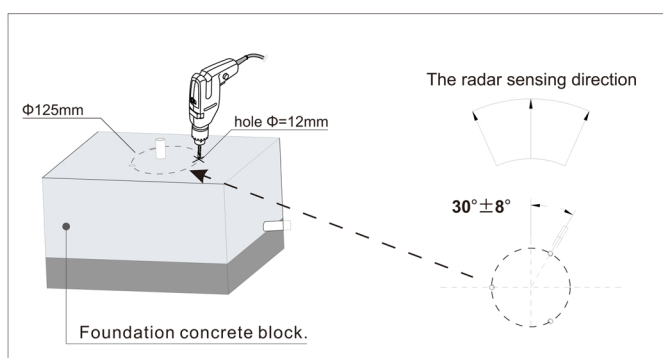

 
3. Fix the conduit tube, Ground drilling (three equal parts on a 125mm diameter circle, the hole diameter is 12mm), Pay attention to the radar sensing direction.

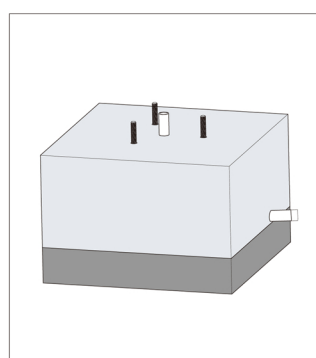

 
4. the expansion screw should be flat with ground

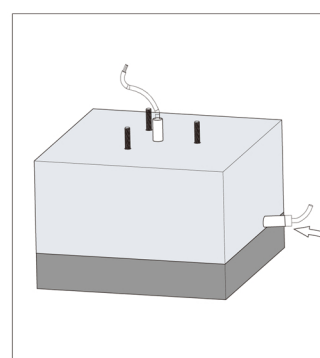

 
5. Put the wire through conduit tube

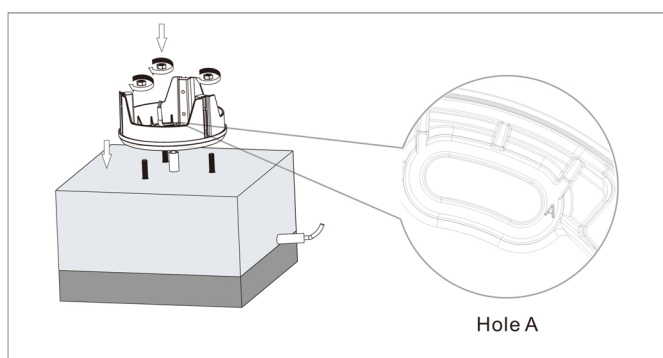

 
6. Fix the mounting plate

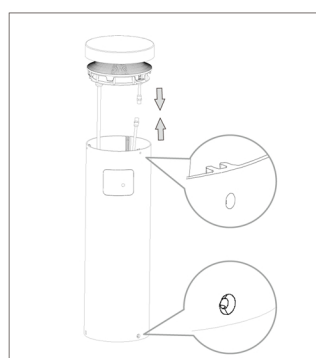

 
7. Connect the wires

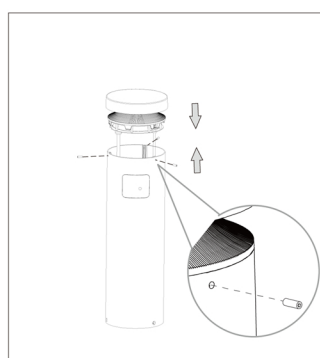

 8. Fix the bollard head and bollard tube

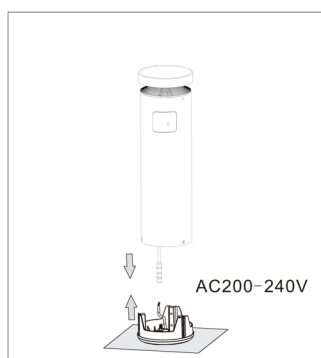

 9. Connect the bollard wire to the electricity cable

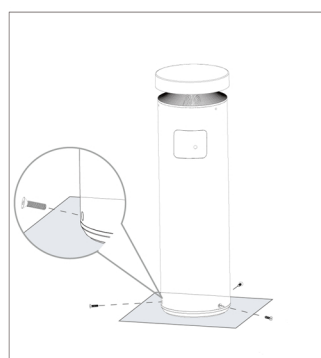


10. Fix the bollard tube onto the mounting base, Pay attention to the radar sensing direction.




Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of 25°C


# TUYA-Bluetooth instruction manual

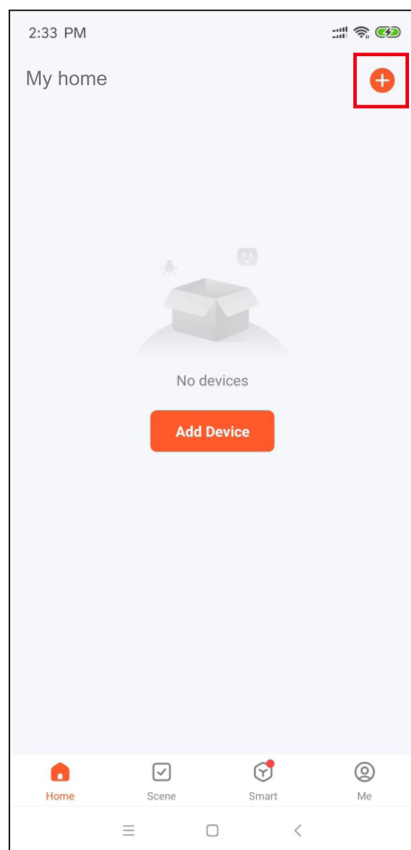 

 
1. Open TUYA app and click "+"

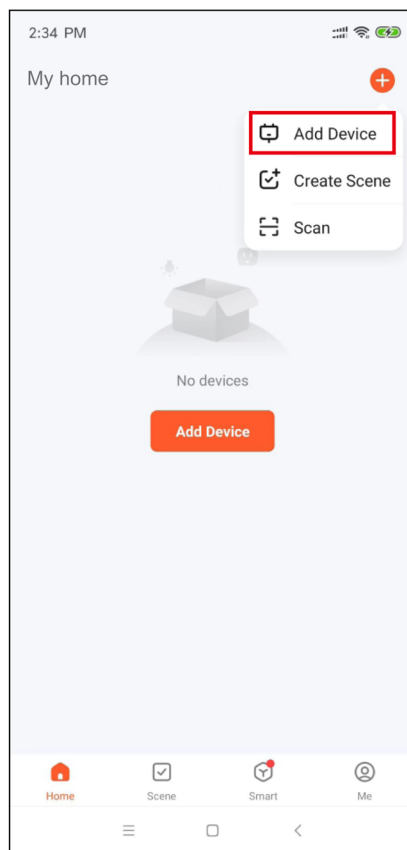

 
2. Choose "Add Device"

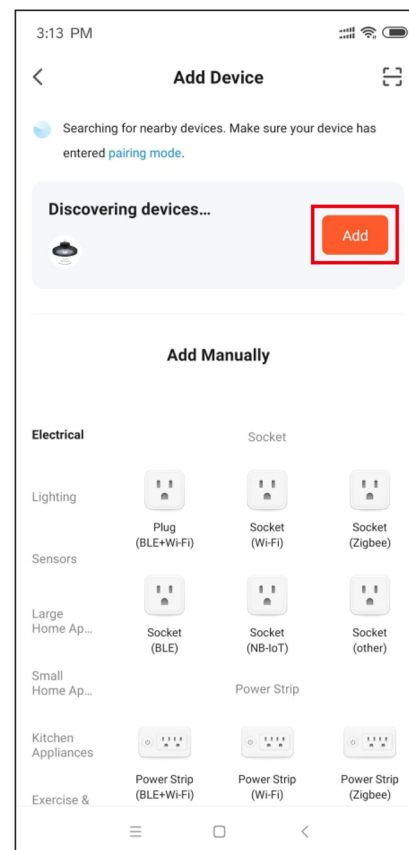

 
3. Click "Add"

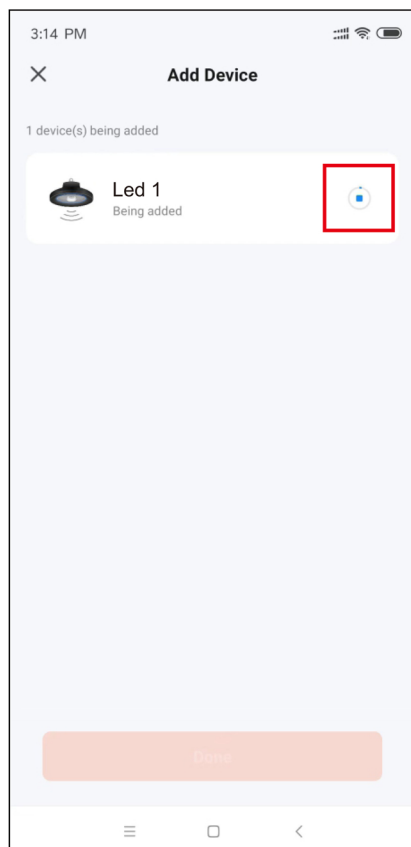

 4. Add Device

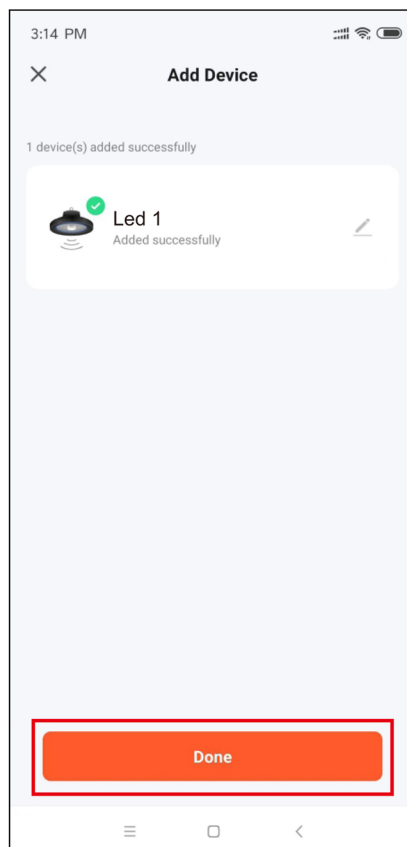


 5. Add Device completed

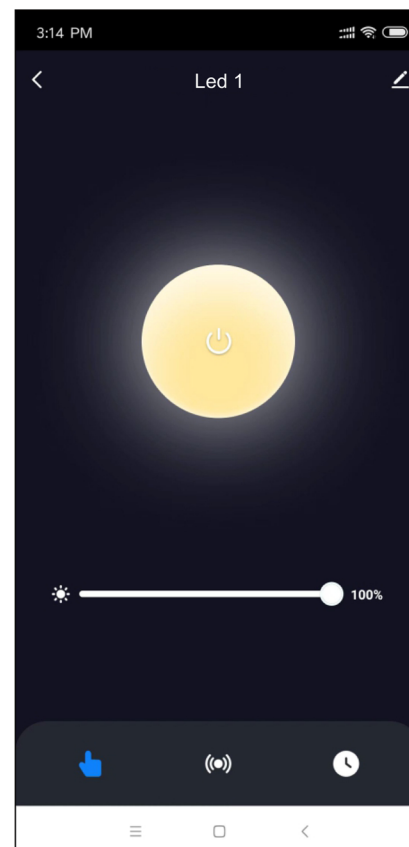


6. On/Off and Dimming

 
Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of  $25^{\circ}\text{C}$

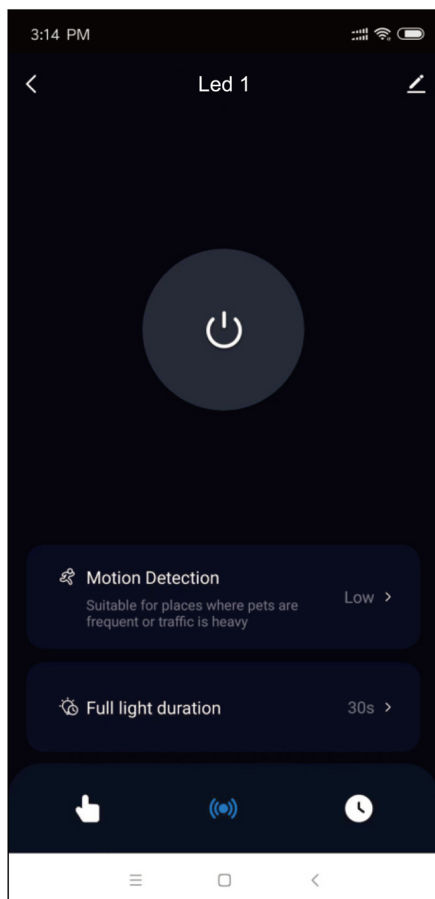

 7. Open Radar sensor

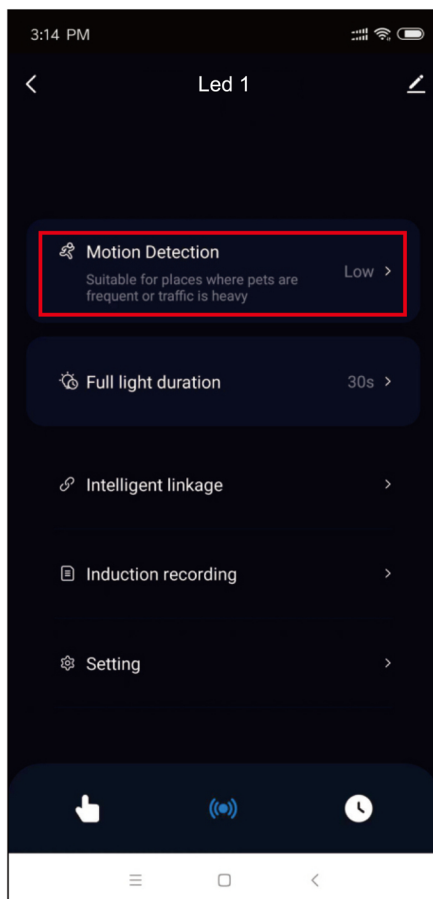


 8. Motion Detection

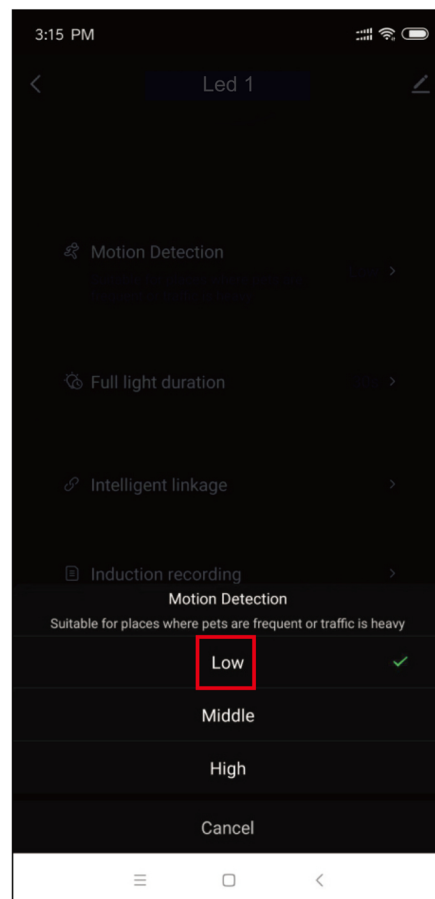


9. Click " Low "


## Detectable area

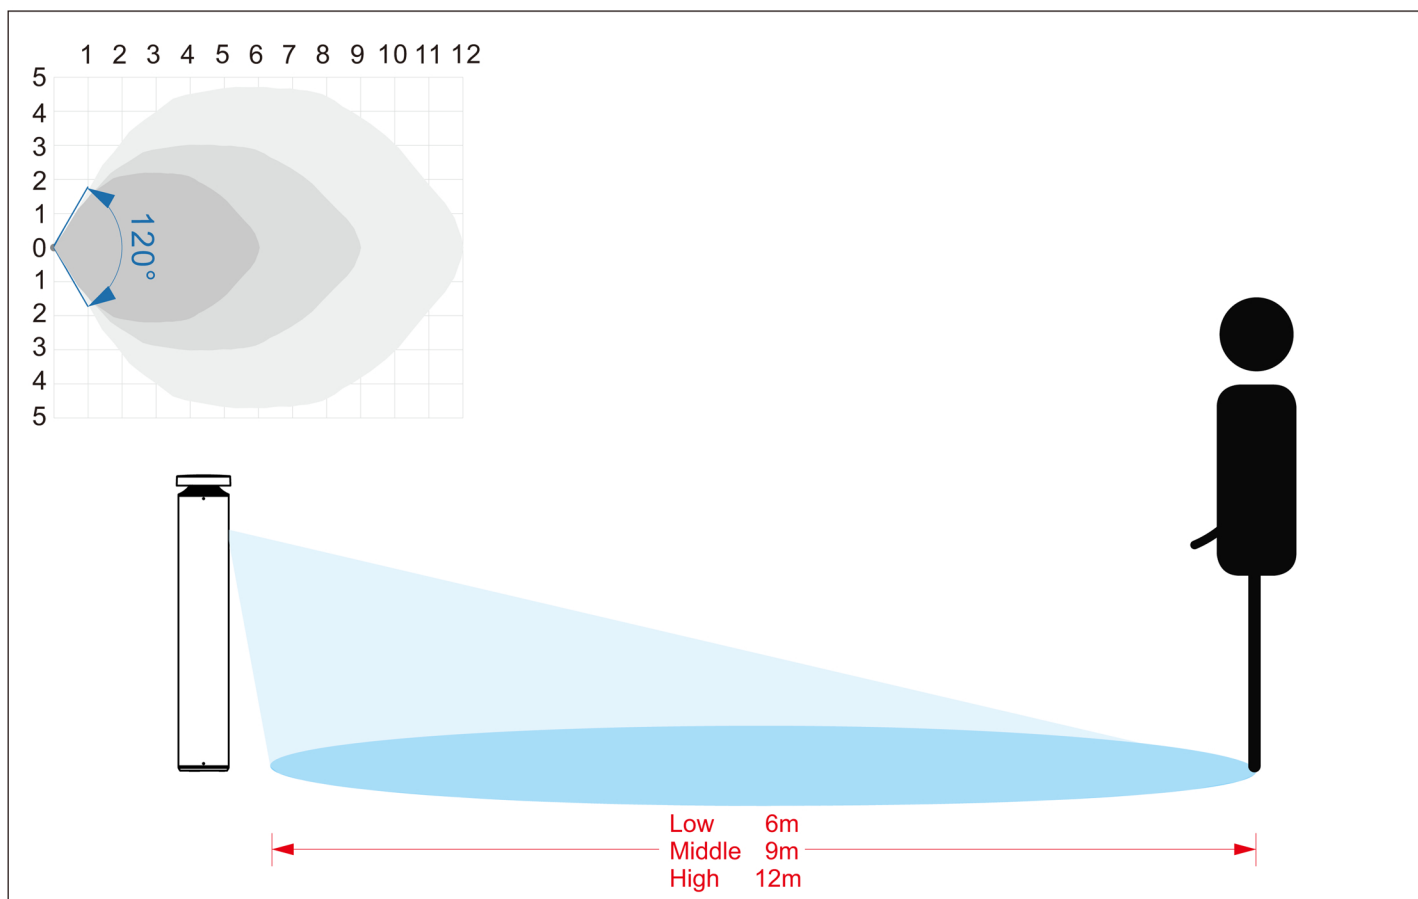 

 
Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of 25°C

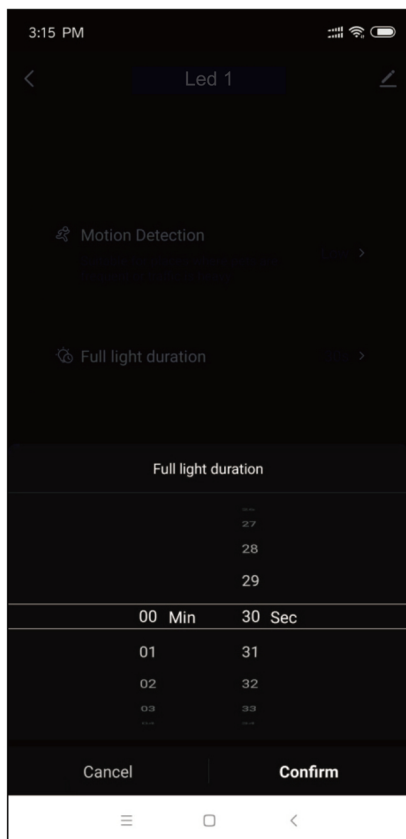

 
10. Full light duration

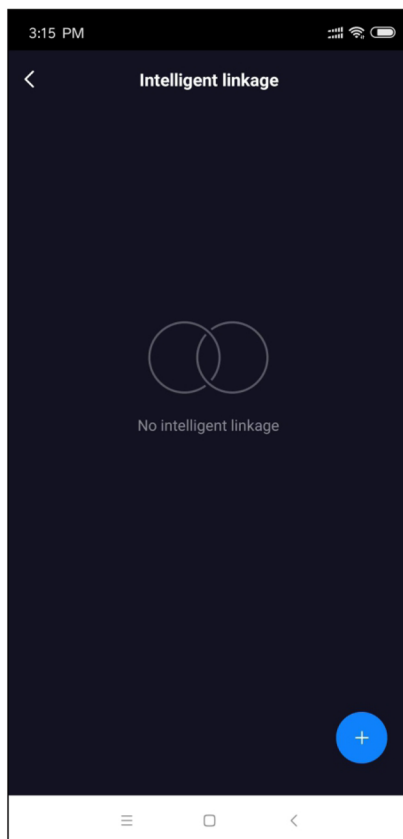

 
11. Intelligent linkage

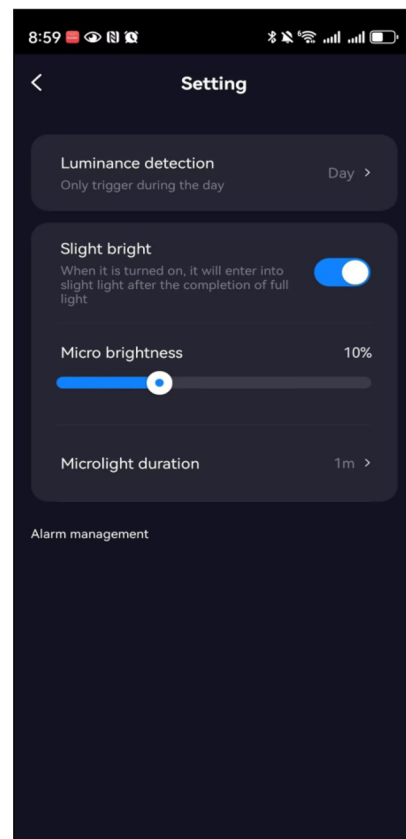

 
12. Setting (Luminance detection, Only trigger during the day)

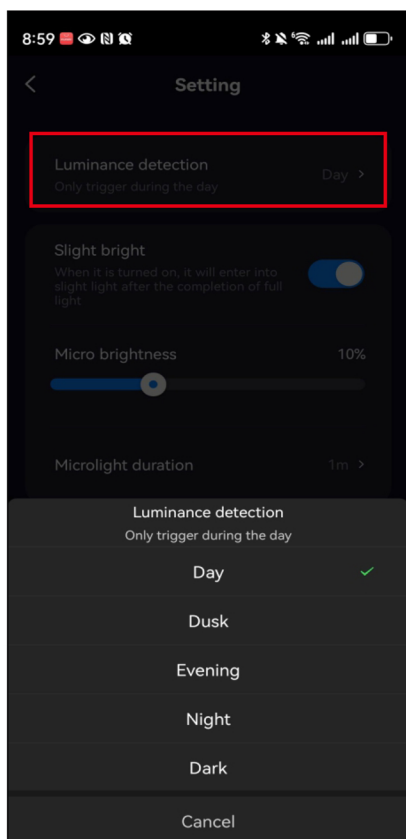

 13. Click Luminance detection to select brightness (Day 2000Lux, Dusk 300Lux, Evening 50Lux, Night 10Lux, Dark 5Lux)

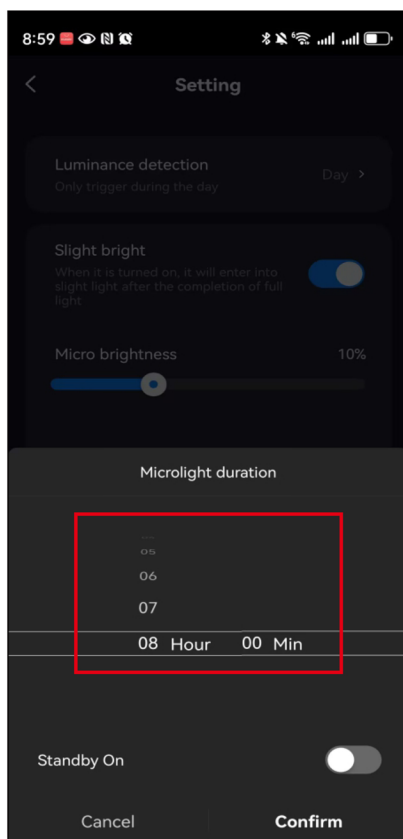

 14. Set the light time after sensing someone leaving. The maximum time is 8 hours.

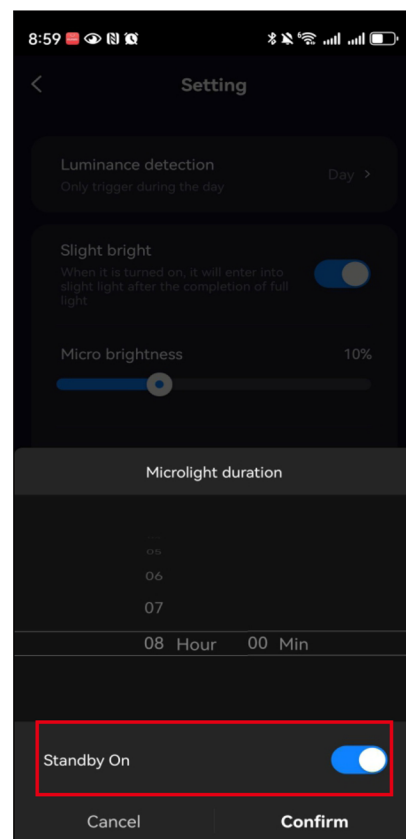

15. Turn on the Standby On function, and the light will stay on when it senses someone leaving.

Reset setting: Bluetooth can be reset by repeatedly turning on and off for more than 5 times

Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at  $\pm 5\%$ . Unless stated otherwise, the values apply to an ambient temperature of 25°C