



Please read carefully before installing, or you will bear the consequences

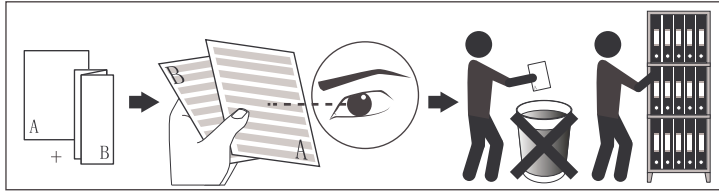


765-03-(1000 / 2000)

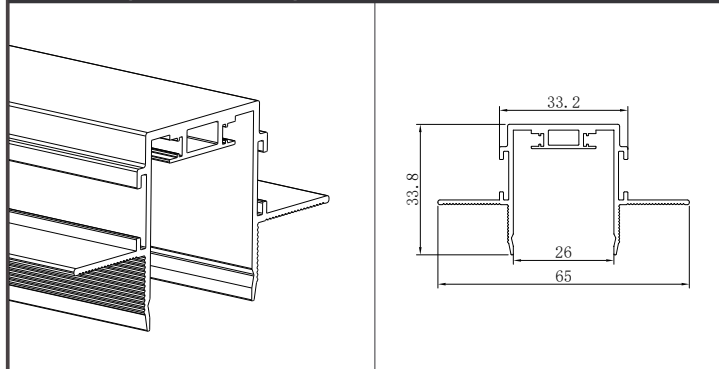


40V-DC
200 watts maximum, 20 meters maximum

ET16-R2C 180°straight splicing

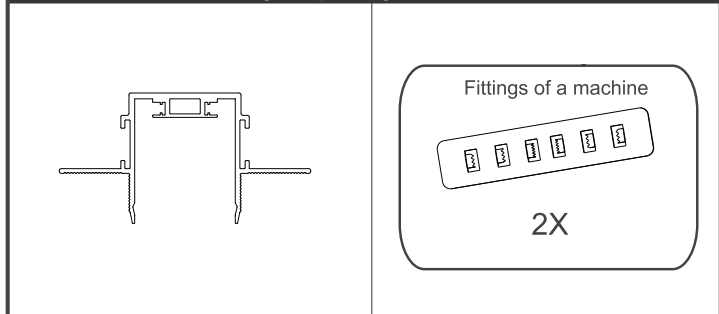


1

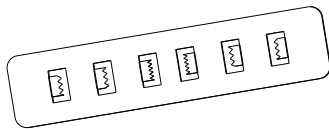


⚠ Distinguish the A and B sides of the dental iron sheet.
The convex side is A and the concave side is B


2

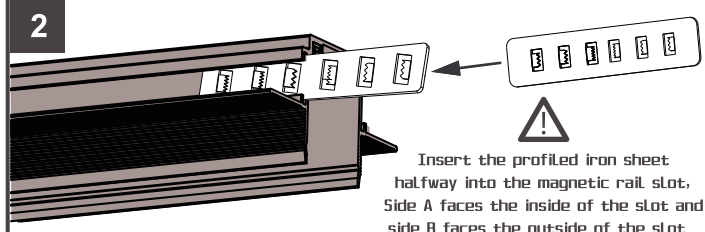

3

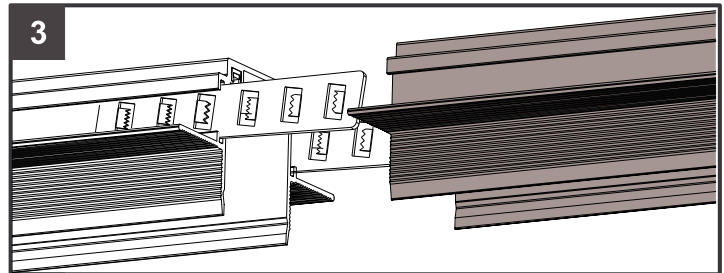


4

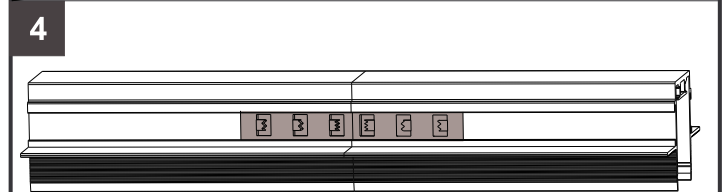






Install

Installation position requirements

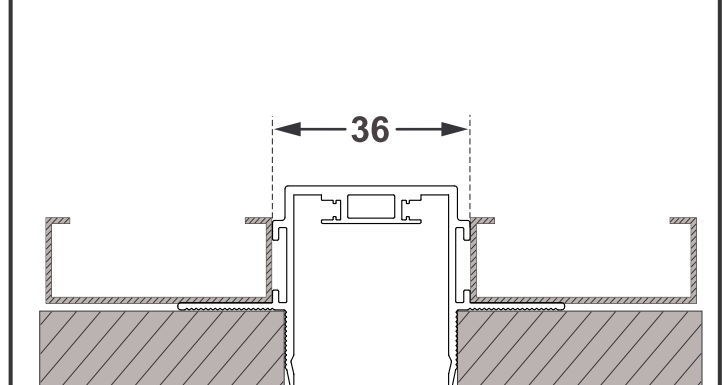


1


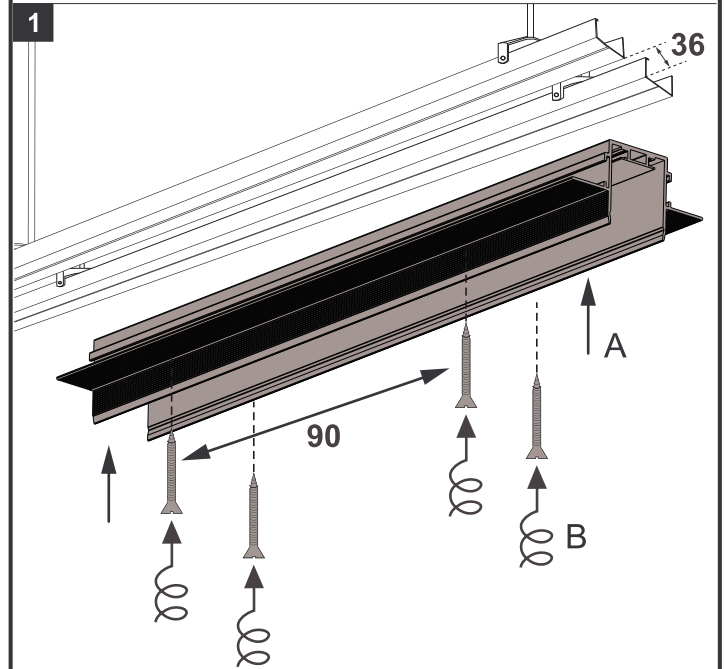


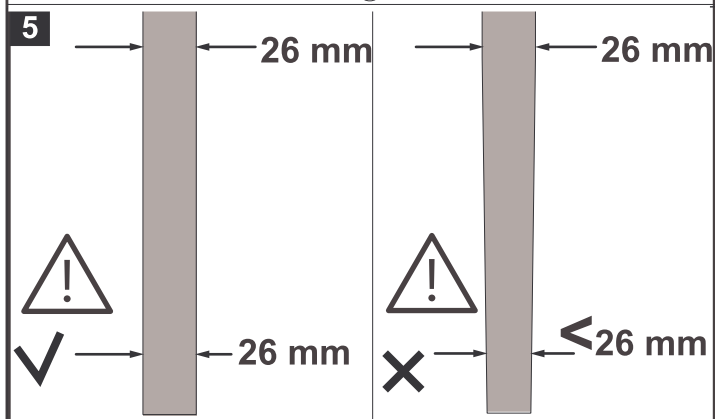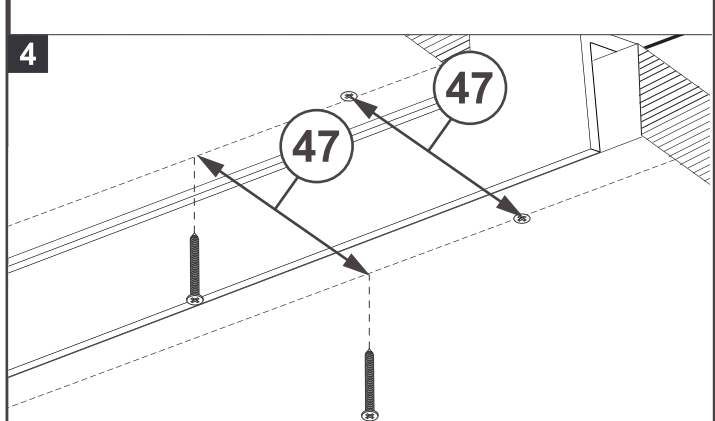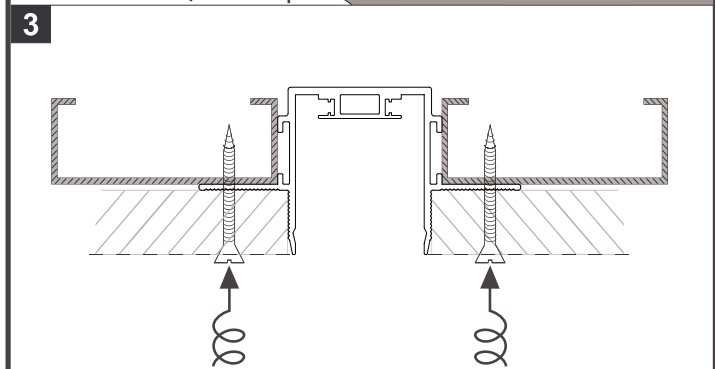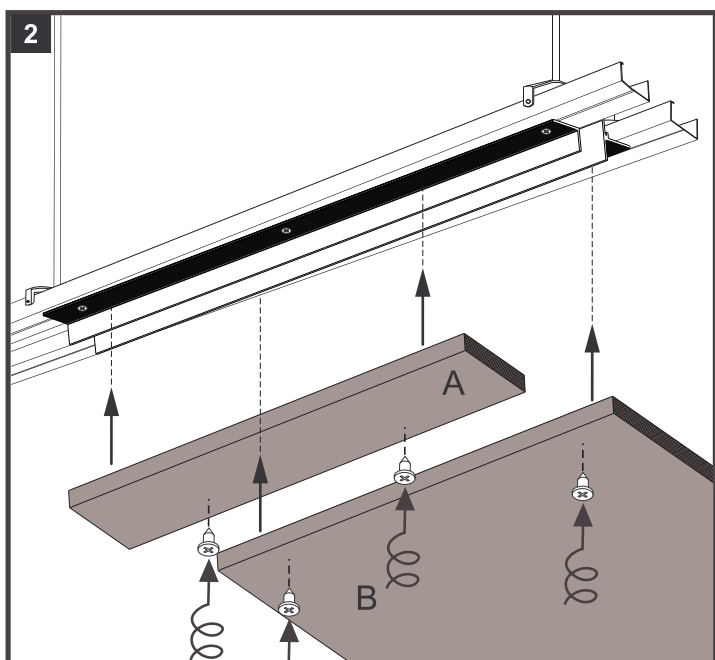

Putty and paint

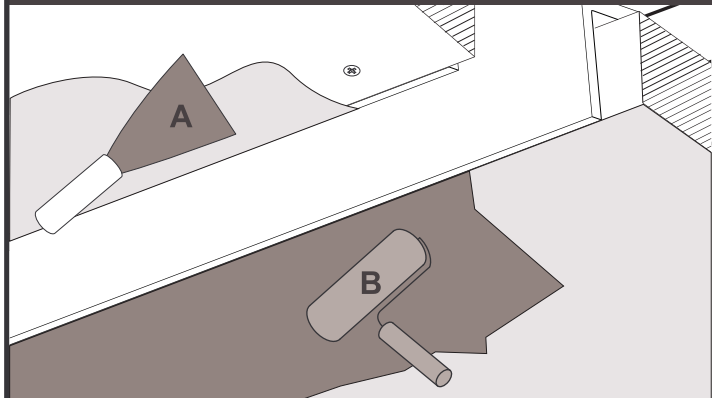

ET16-R2C Plug

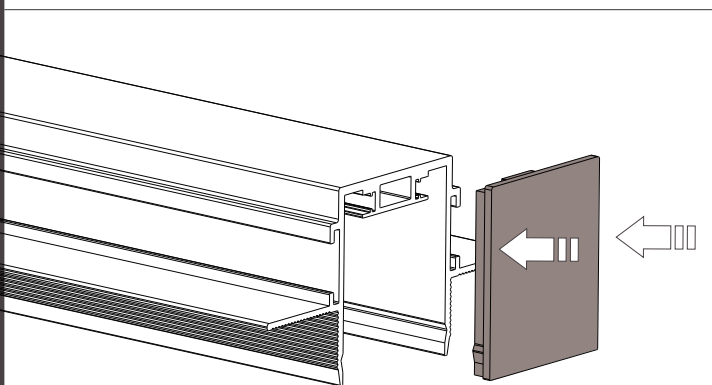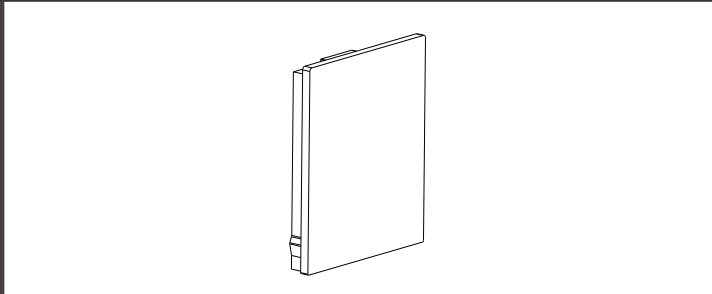

Align and push horizontally