

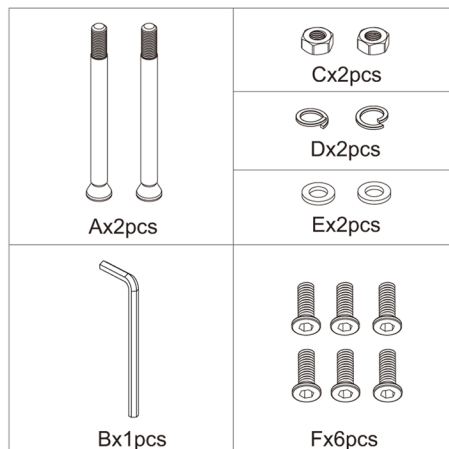



Installation instruction

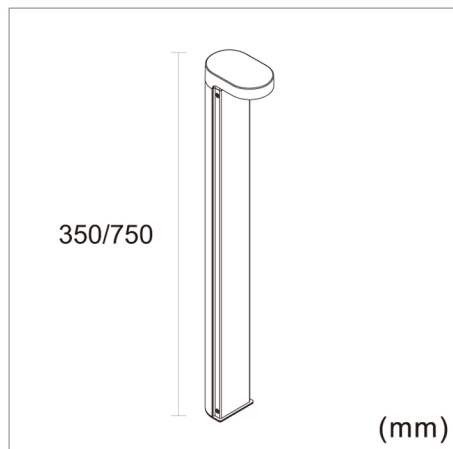


Accessories bag

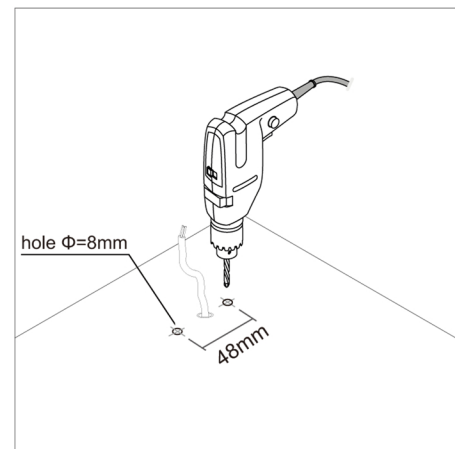


1. Drill two 8mm diameter anchor holes into the ground, each 60mm deep and spaced 48mm apart.

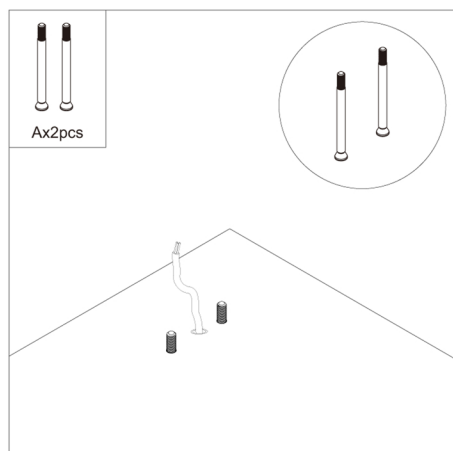


2. Insert the expansion screw to the holes

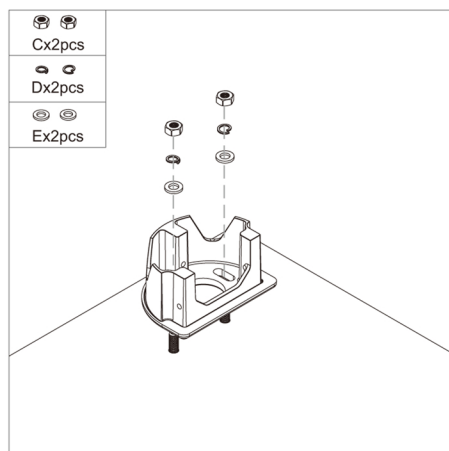


3. Fix the mounting plate

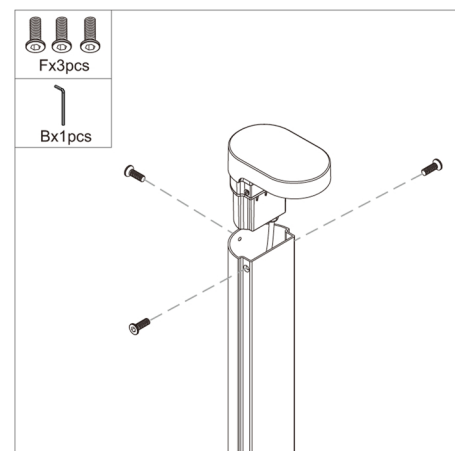


4. Fix the bollard head and bollard tube

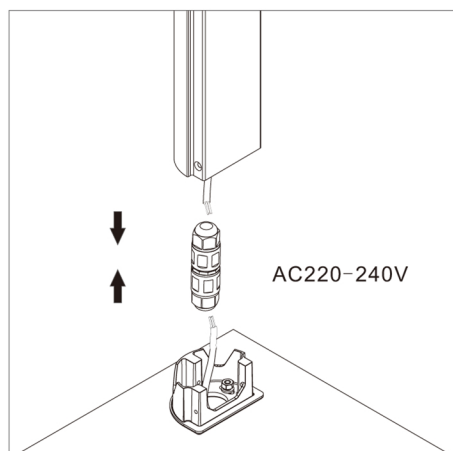

5. Connect the bollard wire to the electricity cable

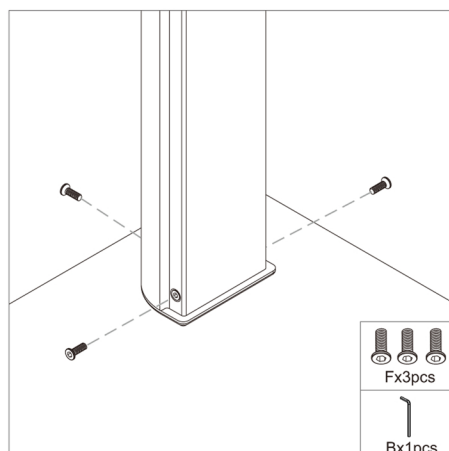

6. Fix the bollard tube onto the mounting base

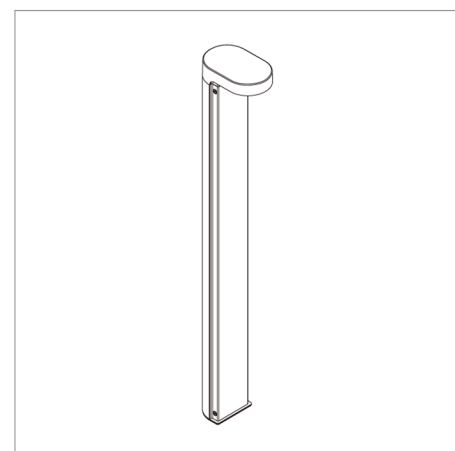

Pluxb luminaires are developed with globally recognized and tested components suppliers, however as per international standards tolerance in initial flux and connected load is at $\pm 5\%$. Unless stated otherwise, the values apply to an ambient temperature of 25°C